

# IPTV Set-top Box

*Detailed user manual download from*  
**[www.antiktech.com](http://www.antiktech.com)**





***Dolby Digital:***

*Manufactured under license from Dolby Laboratories.*

*Dolby and the double-D symbol are trademarks of Dolby Laboratories.*



***HDMI:***

*Transferring uncompressed video data and compressed or uncompressed digital audio data from a HDMI-compliant source device.*




***MPEG2:***

*Audio and video compression and transmission.*

***Note:***

*Set-top Box 's firmware is subject of ongoing software development therefore not all the functionalities described in the manual respond to the current status.*
 
## IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS



*WARNING! To reduce the risk of fire or electric shock, do not expose the device to rain or moisture.*

- *Read these instructions carefully!*
- *Follow these instructions!*
- *Mind all the warnings!*


- Do not remove device covers as this may result in personal injury or mechanical damage. There are no user serviceable parts inside
- Position the cables so that they cannot be walked on or pinched by items placed on or against them
- Use only power cables provided in the box.
- Make sure that the voltage of your electricity supply is the same as that indicated on the rear of your set-top box
- Do not place it on soft or slippery surface.
- Do not place any objects on top of the set-top box or near it.
- Do not block any ventilation openings.
- Put the device in a properly ventilated area, away from direct sunlight or any source of heat.
- Do not install it near any electrical device.
- Do not expose the device to influence of magnetic field
- Protect it from chemicals, dust and humid environment.
- Unplug this set-top box during lightning storms
- Clean only with dry cloth while set-top box is powered off
- Do not use any detergent to clean it.
- Keep it away from the rooms with high humidity.
- Use only certified remote control batteries.
- Under any circumstances do not dispose of this product with your normal household waste.
- Refer all servicing to qualified service personnel only at your provider
- Your provider will not accept liability for any damage caused by not following these safety instructions and warnings

## **CONTENT**

 - 3** IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS
- 4** CONTENT
- 5** CONNECTING OF SET-TOP BOX TO YOUR LOCAL NETWORK
- 6** CONNECTING OF SET-TOP BOX TO YOUR Wi-Fi NETWORK
- 7** CONNECTING OF SET-TOP BOX TO A TELEVISION
- 8** CONNECTING OF SET-TOP BOX TO A TELEVISION USING ANALOGUE AV CABLE
- 8** CONTROLING OF SET-TOP BOX BY IR2
- 9** CONNECTING OF SET-TOP BOX TO THE MAIN SUPPLY
- 9** IDENTIFICATION OF PARTS
- 10** THE REMOTE CONTROL (RC) - BUTTONS DESCRIPTIONS
- 11** THE REMOTE CONTROL (RC) - BUTTONS DESCRIPTIONS
- 12** FREQUENTLY ASKED QUESTIONS (FAQ)
- 13** SETTINGS - TV OUTPUTS
- 14** OTHER OPTIONAL SET-TOP BOX FEATURES.
- 15** OTHER OPTIONAL SET-TOP BOX FEATURES.
- 16** TECHNICAL SPECIFICATION

## CONNECTING OF SET-TOP BOX TO YOUR LOCAL NETWORK



Connecting of Set-Top Box to local network.

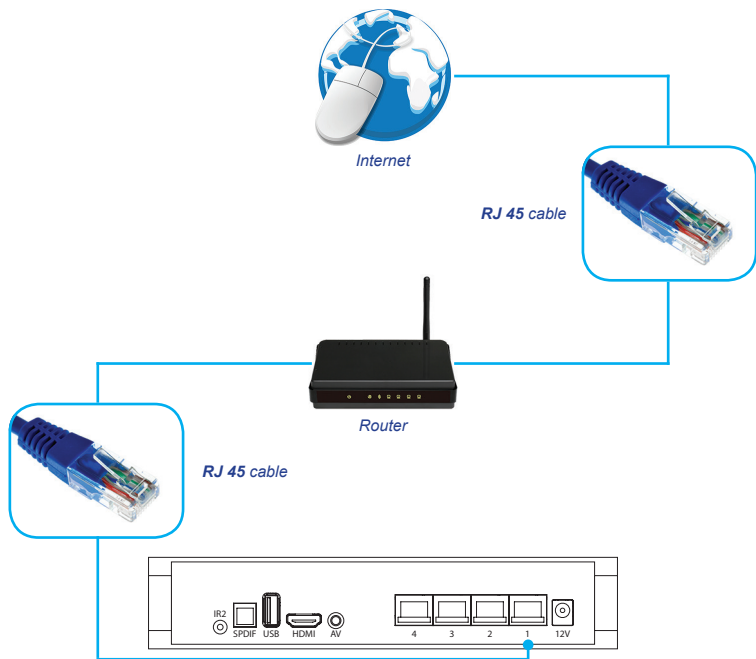

## CONNECTING OF SET-TOP BOX TO YOUR WI-FI NETWORK


1. Place your Set-Top Box within the reach of wireless network
2. Connect Set-Top Box to wireless network
3. Use the following steps to set the connection in Menu:

  *Settings > Wifi > Scan AP > Select AP > Insert password > Connection*

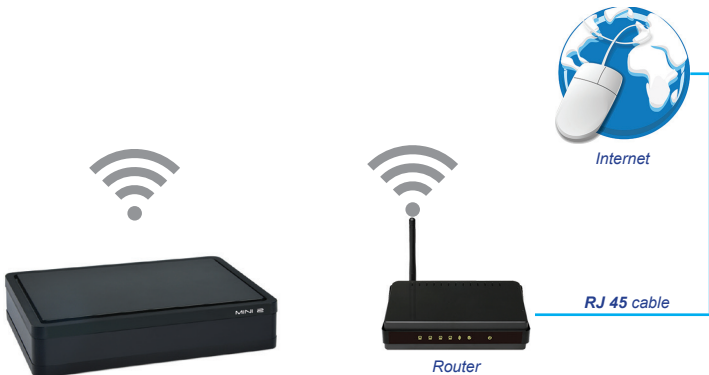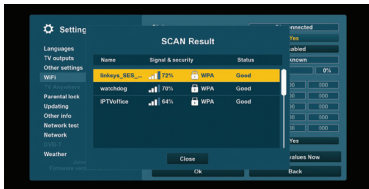

## CONNECTING OF SET-TOP BOX TO A TELEVISION

 Connecting to a Television by a **HDMI** cable.

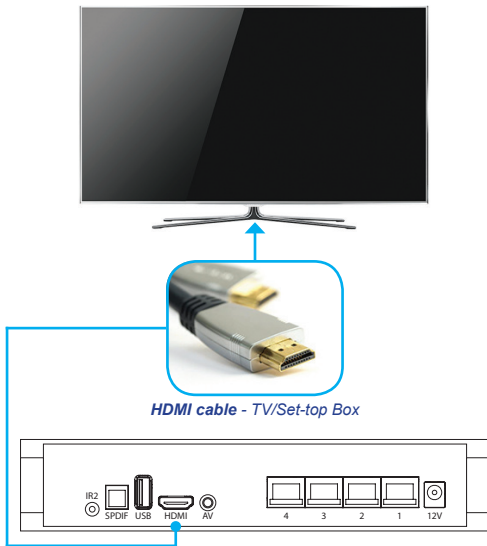

**Using this type of connection set in Menu:**

1. *Settings / TV Outputs / Type of connection – HDMI / HD resolution – 1080i, 720p or 576i (480i for NTSC) depending on type of TV.*
2. *Confirm it by pressing the Use button. Set-top box will restart.*

## CONNECTING OF SET-TOP BOX TO A TELEVISION USING ANALOGUE AV CABLE

Connecting to a Television by a AV adaptor cable.



**AV cable**



**AV cable adapter**



## CONTROLLING OF SET-TOP BOX BY IR2

 
Controlling a STB by a IR2 sensor, if STB is hidden ( e.g. in furniture).



**IR2 sensor**  
- to be placed in visible area



**IR2 cable (1,2m) - connected to Set-top Box**






## CONNECTING OF SET-TOP BOX TO THE MAINS SUPPLY

After connecting of a Set-top box to a Television or PC screen by one of the mentioned options, plug the set-top box into the mains supply.

In order to put Set-top box into standby mode use standby button on remote control. Do not unplug the Set-top box from the mains supply.



 12V DC 2A



## IDENTIFICATION OF PARTS

 
### Front panel




IR sensor

LED standby controller

### Back panel

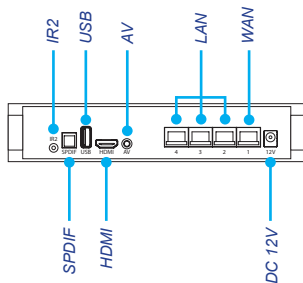

## THE REMOTE CONTROL (RC)\*

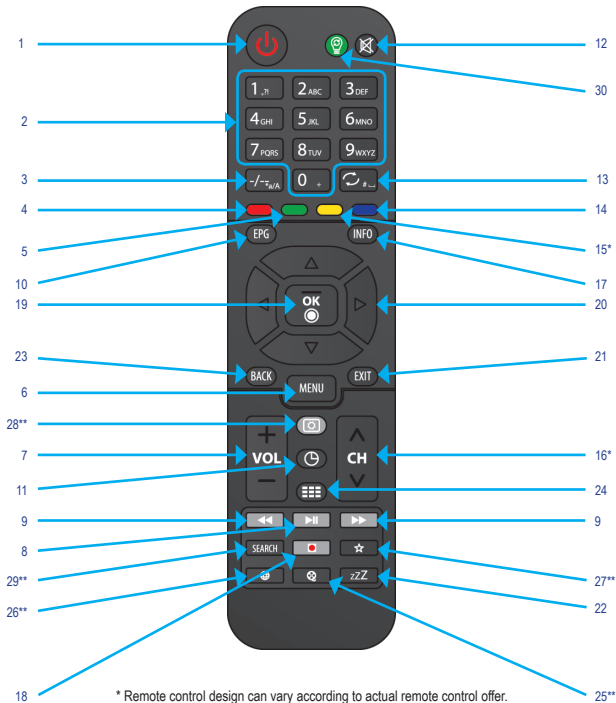 

## BUTTONS DESCRIPTIONS

- 1 On/Off - StandBy - to set the device to StandBy mode. To switch to device on again, press StandBy once again.
- 2 Numeric keys 0 – 9 switching the channels, inserting the signs.
- 3 Switching the channels for 2 and 3 digits program number
- 4\* TV
- 5\* Radio
- 6 MENU - to display or exit from the menu
- 7 Volume - to adjust the sound level
- 8 Play / Pause - video keys - to control video on demand movies or recorded sequences
- 9 Forward / Rewind - video keys - to control video on demand movies or recorded sequences
- 10 EPG - electronic program guide - to display program list of channels
- 11 Time display
- 12 MUTE – to disable or enable the sound
- 13 The last watched channel
- 14 Settings
- 15\* Recording - quick entry to recording menu
- 16\* Channel selection - use this buttons to access the next or previous channel
- 17 Information about current program
  - information about following programs
  - buffer - amount of downloaded audio and video segments\*\*\*
- 18 STOP - video key - to controll video on demand movies or recorded sequences, Record button
- 19 Selected option confirmation
- 20 Navigation keys - for moving within the menu
  - for switching the channels in channel list in one position - Up/Down arrows
  - for switching the channel in channel list in five positions - Left/Right arrows
- 21 Exit button
- 22 Timer - sleep functionality
- 23 One step back
- 24 Mosaic
- 25\*\* Video content
- 26\*\* Internet browser launching
- 27\*\* Favourites or stream profile selection (\*\*\*)
- 28\*\* Channel menu - its content depends on your television service provider.  
For example: - Display mode
  - Audio track change
  - PIP – picture in picture - On/Off
  - Teletext (only on supported channels)
  - Subtitles (only on supported channels)
- 29\*\* Searching of media content within stb's Video & EPG content
- 30 Smart Home Energy button

\* \* Colour coded buttons - buttons of various functionalities based on chosen menu.

\*\* \*\* Buttons of various functionalities - depends on your television service provider.

## FREQUENTLY ASKED QUESTIONS (FAQ)

*Before you contact your provider regarding any troubles with you set-top box, check these Frequently Asked Questions. You might find you answer right here.*

### **TROUBLE**

### **HELP AND ADVICE**

Picture on the screen is OK but there is no sound

- double check Menu/Settings/TV Outputs – if all selected options are in compliance with connection of set-top box to your TV (depending on type of your TV)
- check the connection of AV cable (if you are connected via AV cable or AV cable adaptor)
- volume is down or MUTE button on remote control of set-top box or TV is pressed

No picture

- incorrect setting of TV Outputs on set-top box. Use front panel of set-top box to correct it.
- incorrect setting of TV Outputs on your TV (depending on type of your TV)

Channel list is empty

- channel list is downloaded automatically once per 24 hours or by unplugging of set-top box from mains lead and plugging it in straight after
- double check if set-top box is connected to internet network

No response to remote control

- no remote control batteries in or remote control batteries exhausted
- front panel obstructed

Picture freezes

- try to switch to another channel or restart set-top box by unplugging / plugging in from/to mains lead or insufficient internet bandwidth

Square blocks picture

- check if internet cable was not for some reason interrupted or damaged
- restart set-top box

Quality of Picture is not satisfactory

- check if Menu/Settings/TV Outputs are correctly set (depending on type of your TV)

Everything seems to be set correctly, but there are no channels in Channel list

- it could be causing by connection of a router between set-top box and internet cable – restart router and set-top box at the same time
- check if diode on WAN port is lit (if it is not, disconnect/connect internet cable)

## SETTINGS - TV OUTPUTS

Use right arrow to enter the right side of Settings. Use Menu button to return to the left side of Settings.

The screenshot shows the 'Settings' menu with 'TV outputs' selected. The 'TV System' section is expanded to show 'Mode Setting' with 'PAL' and 'SINGLE' options. The 'TV' section shows 'TV aspect ratio' set to '16:9'. The 'Type of Connections' section shows 'HDMI' selected. The 'HD resolution' section shows '720p' selected. A 'WARNING !!!' message states: 'Device must be restarted to apply the required changes by pressing the Use button.' At the bottom, there are 'Use' and 'Back' buttons.

**TV aspect ratio:**  
Switching the formats  
16:9 / 4:3

**Broadcast system**  
PAL / NTSC

Single – connecting of  
1st TV set. Single+PIP  
– connecting of 1st TV  
set+PIP functionality

**Settings**

Languages  
**TV outputs**  
Other settings  
WiFi  
TV Anywhere  
Parental lock  
Updating  
Other info  
Network test  
Network  
DVB-T  
Weather

TV System  
Mode Setting

PAL  
SINGLE

TV  
TV aspect ratio  
16:9

Type of Connections  
HDMI

HD resolution  
720p

WARNING !!!  
Device must be restarted to apply the required changes by  
pressing the Use button.

Use Back

Various types of  
connections of set-top  
box to TV.  
HDMI / DVI monitor /  
\*YPbPr

When Type of con-  
nection is HDMI or  
DVI monitor or \*YPbPr  
you may choose HD  
resolution  
1080i / 720p / 576i -  
(480i for NTSC).

 
Confirming of the  
selected choice.Set-top  
box will restart.

Return to the  
left side of Settings

\* only via adapter

# OTHER OPTIONAL SET-TOP BOX FEATURES.

Detailed user manual on [www.antiktech.com](http://www.antiktech.com)

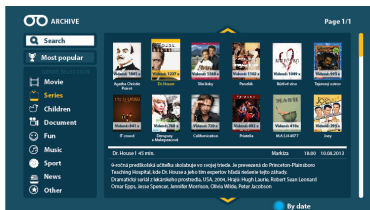


Archive – Archive by genres



Multi EPG



 
Personal Video Recorder

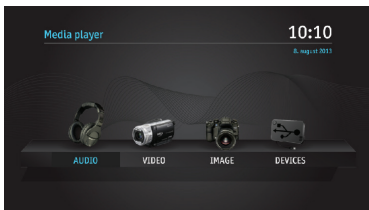

Media Player (music, pictures, movies)



 BitTorrent (music, pictures, movies)

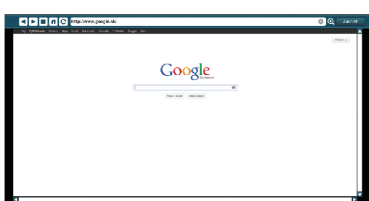

Internet Browser

Actual temperature **15°C**

Morning 30°C Noon 30°C Evening 30°C

Humidity: 70%  
Precipitation: 50%  
Wind speed: 30km/h

Weather lore  
And even if you're smiling, it's not like raining  
And you're right, you're a dog!

Wednesday	Thursday	Friday	Saturday	Sunday	Monday
15/6°C	15/6°C	15/6°C	15/6°C	15/6°C	15/6°C

www.metro.sk Today is name day of Bratislav Close

Weather

TV MOSAIC 1/3


Disney Channel Eurosport

EXIT Mosaic exit

Mosaic

Recording 18:25 Discinfo

Device A: USB Kingston

Total capacity:	4 GB	Used
Free:	3.2 GB	Free
Available for release:	0.2 GB	Available for release

Disc mode: TrackAtOnce - PVR 70% Format disc

Pause TV / Start-over TV

MENU\_VOD

TOP movies Genres Search My account

THE SIMPSONS MOVIE

★★★★★ The Simpsons Movie

After Homer accidentally pollutes the town's water supply, Springfield is encased in a gigantic dome by the EPA and the Simpsons Family are stranded together.

Video On Demand

Room 50013 No... Jaka Smitis Current Account...

Food Delivery Investigation Food Delivery


Show items Total: 0,00 EUR

Hotel IPTV

0:00 0:00

Playlist Exit Top Genres Search

Detail information: Rihanna, Te Amo, 3:03, 128 kbps

Similar songs

Add to playlist Screensaver (OFF) Repeat mode Shuffle mode

Music On Demand

## TECHNICAL SPECIFICATION

<b>Dimensions:</b>	205 x 135 x 40 (mm)
<b>Power Supply:</b>	12V/2A (external power supply adapter 100-240V, 50/60Hz)
<b>Connectors:</b>	HDMI 1.4b AV connector (CVBS, L+R audio) TOSLINK (S/PDIF digital optical audio output) 1x, 2x or 4x RJ45 (Ethernet 10/100baseTx) USB 2.0 external IR sensor antenna RF input (optional)
<b>Hardware:</b>	CPU: STiH207/STiH254 DRAM: 512MB DDR3 Flash: 512MB Embedded Wi-Fi (802.11 b/g/n) 4-port 10/100 Ethernet switch (VLAN supported) DVB-T/T2/C tuner (optional)
<b>Video:</b>	MPEG-1/2 H.264 (AVC) VC-1 (WMV9) MPEG-4 part 2 (DivX, XviD) Flash (VP6, Sorenson)
<b>Audio:</b>	MPEG-1/2 (layer I/II) MP3 Dolby Digital (AC-3) AAC (HE-AAC v2 Profile) FLAC Vorbis
<b>Operating System:</b>	Linux
<b>Accessories:</b>	Remote control, AV Cable adaptor, Power supply adaptor, HDMI cable, Batteries, Manual, IR 2 extended cable (only on selected models)

*To save up internet datas, Set-top box switches off automatically after 2 hours of remote control inactivity.  
Number of RJ45 connectors on back panel depends on STB version.*